



Loosen the two nuts on the flow sensor housing in the cold water inlet line. Remove the sensor and inspect for any debris lodged in the turbine. Blow through the sensor to ensure the turbine spins freely.